

Ultra Camera SD Card use

To insert SD Card



Insert SD card with label up



Slide into slot until SD card seats in place

To remove SD Card



Push in on edge of SD card to eject
(Primos suggest this only be done with
the camera powered **OFF**)



Slide SD card out using thumbnail in
notch on end of SD card