

PRIMOS
HUNTING

BOSS DOGG™

Model No. 3757

Welcome to the most powerful predator caller available! It “Speaks the Language®” with volume, dimension and clarity that is unmatched. In addition, the Boss Dogg™ comes with a wireless random motion decoy that can be placed 30 yards from the speaker. And you can control it all from 200 yards away!

The BOSS DOGG™ not only gives you individual sounds to choose from, but includes Expert™ Hunts which allow you to have Randy Anderson and other Team Primos members actually calling for you! These are proven hunt sets designed by our expert hunters that bring dogs in!

The Boss Dogg™ includes a simple-to-use Remote that can be operated quickly with one hand and has a range of up to 200 yards. Sound lists are displayed on a 2.5” full color LCD screen and organized by species such as coyote, fox, bobcat, deer, etc.

The BOSS DOGG™ comes loaded with 100 sounds and 8 complete Expert™ Hunts. Additional sounds can be purchased from the Primos Professional Sound library (visit www.primos.com). Take the guess work out of calling in those wily coyotes and “Speaking the Language®” with the BOSS DOGG™!



Speak The Language®,

Will Primos
Will Primos

PLEASE READ CAREFULLY BEFORE USE

IMPORTANT

For your protection, please carefully read these warnings, precautions and safety/operating instructions completely before operating this product. Follow these instructions closely and keep this manual for future reference.

WARNING

To reduce the risk of fire, electrical shock or product damage/failure:

- Do not expose unit with the battery door open to rain, moisture, dripping or splashing. Do not open or close the battery door with wet hand. Completely wipe off water on unit and door before opening.
- Do not lay product on moist ground or submerge in water (this unit is designed for upright outdoor use).
- DO NOT OPEN CASE HOUSING. UNINSULATED, 'DANGEROUS VOLTAGE' WITHIN PRODUCT'S ENCLOSURE. DO NOT REMOVE HOUSING COVER. THERE ARE NO USER - SERVICEABLE PARTS INSIDE, REFER SERVICING TO PRIMOS® CUSTOMER SERVICE.
- Only use batteries as specified in this user manual and install according to correct polarization. Failure to follow may result in leaking or exploding batteries, damage to product, fire or personal injury. Do not handle damaged or leaking batteries.
- Do not expose to extreme heat. Do not leave product and/or batteries exposed in direct sunlight inside a vehicle, or other contained environment for a long period of time.
- Only use accessories as recommended in this manual

WARNING

Permanent hearing loss may result from long-term exposure to sound at high volumes. Speakers are capable of delivering sounds at loud volumes and high pitched tones. Under certain circumstances, exposure to such sounds can result in permanent hearing loss damage.

Reduce Risk of Hearing Damage by Following These Safety Guidelines Prior to using this product follow these steps:

- Always use speaker outdoors.

- Place speaker(s) facing away from you.

During use of this product follow these steps:

- Avoid walking in front of speaker.

- Keep maximum distance from speaker during use. Decrease volume when making adjustments to speaker position.

- Ringing in ears may indicate that sound levels are too high

- If you experience discomfort or ringing in ears, immediately discontinue using this product and consult a physician.

- With continued use at high volume and close proximity, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

CARE & CAUTION

- Transport and handle with care. Do not strongly shake, bump, hit, drop or otherwise cause impact to the product – can result in product malfunction or damage to key components. Additionally, damage to the case could result in imperfections to water-resistant properties.

- Take extra care when handling or using product in places with sand and dust. Sand, dust and foreign substances exposed to product, especially in extreme proportions, may result in poor speaker quality, damage to the external jacks or internal components and could cause malfunction of the product. If exposed to any of these elements, please carefully wipe off completely before continued use.

MODIFICATION WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your warranty of this equipment.

OPERATING TEMPERATURE

- Recommended storage temperature range -10°F to 140°F

- Recommended operating temperature range 20°F to 120°F

WARNING: Primos callers and decoys are so accurate you might attract other hunters, as well as game. The user of this product assumes all risk of injury in association with the use of this product.

WARNING: To avoid possible product damage and/or injury, NEVER INSTALL DIFFERENT TYPES OF BATTERIES in the product at the same time. Failure to follow may result in leaking or exploding batteries, damage to product, fire or personal injury. Do not handle damaged or leaking batteries.

NOTE: IMMEDIATELY REGISTER YOUR BOSS DOGG CALLER FOR WARRANTY PROTECTION!!!





ITEMS INCLUDED

1. Speaker System
2. Long Distance Remote
3. Wireless Decoy w/ Tail
4. Speaker Handle
5. Shoulder Strap
6. USB 2.0 Cable
7. Instruction Manual

NEEDED TO OPERATE (not included)

1. Eight (8) "D" Alkaline, Lithium or Rechargeable Batteries
 - Installed in Speaker System
2. Seven (7) "AA" Alkaline, Lithium or Rechargeable Batteries
 - 4 to be installed in Decoy
 - 3 to be installed in the Remote
3. Standard 3.5MM audio cable(s)
(if using Audio In, Audio Out, or Motion Decoy Port)

NOTE: Make sure you install batteries in both the Speaker System, Remote and Decoy before first use. Then turn Power On for all units.

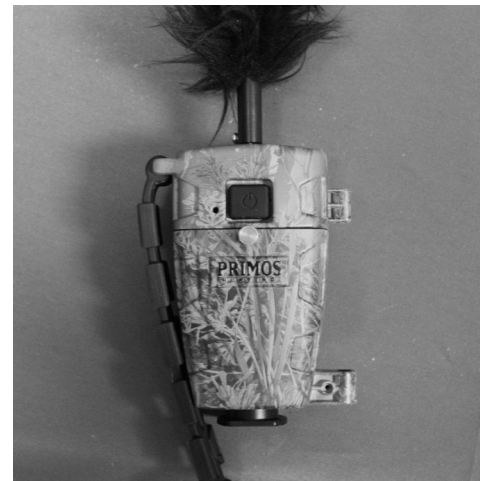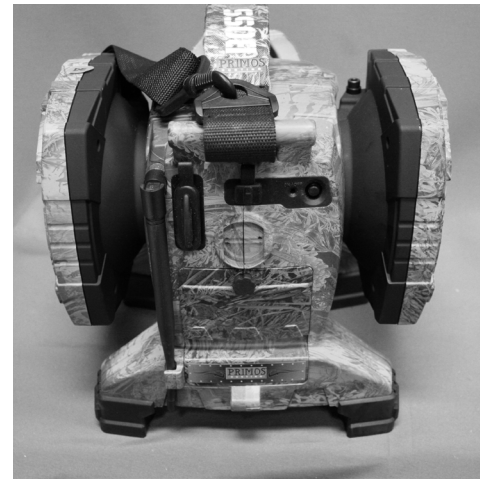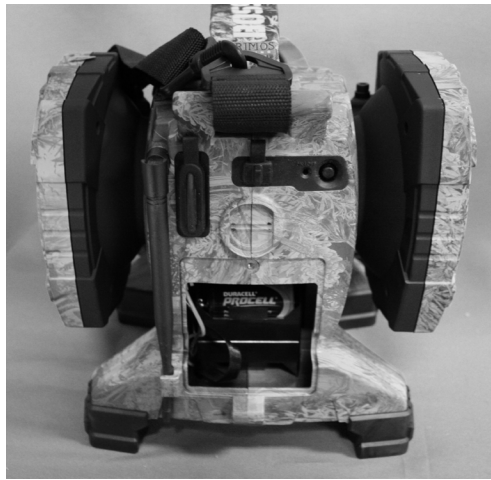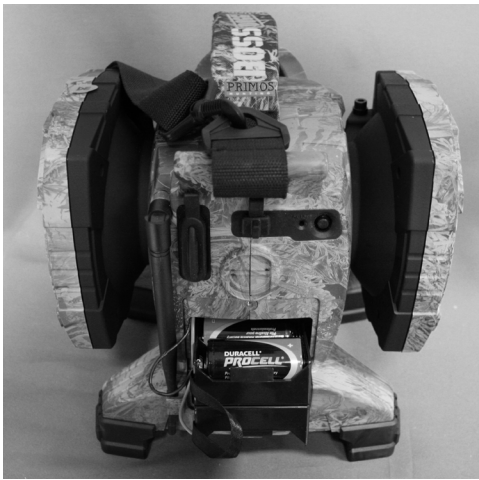

SPEAKER SYSTEM: Remove battery cover on back of unit and remove battery box. Install 8 “D” batteries. Insert battery pack into unit. Install battery cover and tighten screw.

REMOTE: Remove battery cover on back of unit. Install 3 “AA” batteries. Install battery cover.

DECOY: Remove battery cover on front of decoy by loosening screw and sliding cover down. Install 4 “AA” batteries. Install battery cover by sliding cover upward and tighten screw.

NOTE: Must position battery pack so connector is down.

ATTACHING REMOTE AND DECOY TO SPEAKER

1. Line up raised area on back of remote or decoy (also on bottom of decoy) with matching recessed area on top or back of speaker.
2. Insert raised area on remote into recessed area and rotate remote 90 degrees to lock into position.
3. To remove, reverse these steps.

NOTE: Attaching remote or decoy to speaker is designed for storage and decoy operation. Primos does not recommend transporting remote or decoy attached to speaker in and out of the field as it can be bumped and detach from speaker.

REMOTE CONTROL BUTTONS – OVERVIEW

NOTE: Remote control buttons are designed to activate command when button is completely pressed down on the remote. Buttons are set to heavy sensitive to help prevent accidental activation of remote control.

PWR BUTTON

Located on back of the remote.

Note: Must hold button down for 2 seconds to PWR OFF.

D

Factory programmed to control Motion DECOY Operating TIP: Can also be user programmed as a 'HOT' button in SETTINGS.

Menu/Back

Press to return to previous shown screen. Continued pressing will take you back to the Main Menu screen.

HOT 1

Performs pre-programmed action instantly [no matter what is playing or where you are in the menu (except Settings menu)]

- Original factory setting is programmed to play KI-YI sound.
- Operating TIP: Can be user programmed to control other functions in SETTINGS

HOT 2

Performs pre-programmed action instantly [no matter what is playing or where you are in the menu (except Settings menu)]

- Original factory setting is programmed to play Rodent Distress sound
- Operating TIP: Can be user programmed to control other functions in SETTINGS

 
PLAY/SELECT

Standard PLAY sound functionality. Also use to SELECT and SAVE settings

SCROLL

Standard UP/DOWN scroll functionality

Operating TIP: Hold either button down to rapidly scroll up/down.



Standard VOLUME up and down functionality. Operating TIP: Hold either button down to rapidly increase/decrease volume.

PAUSE

Press to PAUSE sound playing [Does not function in Settings menu]



SPEAKER SYSTEM BUTTONS/PORTS – OVERVIEW

PWR BUTTON

Standard ON/OFF functionality

AUDIO OUT

Add external speaker (not included) for additional sound volume. External speaker rating must be 25watts or greater.

NOTE: Requires standard 3.5MM audio cable not included

AUDIO IN

Play custom sounds from external device like an MP3 player (not included).

NOTE: Requires standard 3.5MM stereo audio cable not included

USB

Allows you to add sounds and update software using supplied USB cable.

Note: Remote USB is located in battery compartment.

DECOY

Operates on/off function of an additional wired motion decoy (not included).

NOTE: Requires standard 3.5MM audio cable not included



DECOY BUTTON/FEATURES – OVERVIEW

PWR BUTTON

Standard ON/OFF functionality

DECOY TAIL

Insert tail into HEX socket on top of decoy. Magnet holds tail in place so decoy operates at all angles.

NOTE: Primos® does not recommend transporting with tail attached.

STEEL GROUND STAKE

Used to position decoy up to 30 yards from speaker. Threads into bottom of decoy.

NOTE: Primos® does not recommend using ground stake in rocks or frozen ground.

RUBBER STRAP

Allows you to position decoy in tree, brush, fence post, etc.

Bottom Mount

Allows you to attach decoy on top of speaker system.



SPEAKER & DECOY PLACEMENT

Primos® recommends placing speaker within 50 yards of your location. Position speaker(s) facing away from your location. Coyotes are known to hang up at longer distances so keeping speaker within 50 yards allows for closer shots. Also place speaker to side of your location so animal is looking to the side of you and not in direct alignment with you.

Primos® recommends placing decoy within 20 yards in front of speaker so predators believe sound is coming from decoy.

***IMPORTANT NOTE:** If speaker is placed at long distances, on the ground, in thick cover, in under brush, or has obstructions between remote and speaker always check antenna signal. If antenna signal indicator does not appear on remote, raise speaker off ground or decrease speaker distance. If antenna signal indicator does not appear on remote, product may not operate properly.*

OPERATION INSTRUCTIONS

MAIN MENU		
Sounds by Category	All Sounds Crow Hunting Deer Hunting Elk Hunting Other Hunting Predator Hunting Turkey Hunting Waterfowl Hunting Woods Sounds	<p>Use to find sounds installed on unit by the type of hunting. For example, enter 'Deer Hunting' folder to find all sounds installed on the unit that pertain to deer hunting. Enter the Sound Category of your choice and start playing sounds!</p> <p>Sound Sub-Categories – Some Sound Categories have a lot of sounds, so we have included sub-categories to make it easier to read and navigate. For example, 'Predator Hunting' has the following sub-categories: Bird Sounds, Bobcat Sounds, Cougar Sounds, Coyote Locator Sounds, Coyote Sounds, Fawn Sounds, Fox Sounds, Other Sounds, Rabbit Sounds, Raccoon Sounds, Rodent Sounds, Squirrel Sounds and Wood Sounds.</p> <p>You can also explore ALL SOUNDS in a sound list by species.</p>
My Favorite Sounds	(create yourself)	<p>This feature allows user to place your favorite sounds/most used sounds in a folder so they are quickly accessible. This folder can hold up to 25 sounds.</p>
Expert™ Hunts		<p><u>Note:</u> In general, HUNTS on this unit are a list of sound tracks that are combined in a specific sequence with predetermined 'silent space'. This allows the user to simply hit the PLAY button and the caller does the rest (just like your stereo playing an audio CD). Some HUNTS might be 1 minute long, other may 30 minutes, just depends on the type of hunting.</p> <p>This feature allows user to play Expert™ Hunts which are successful sets that Team Primos™ experts, such as Randy Anderson, have proven to be most effective. These are the same calling sequences the EXPERTS use successfully on their TV shows... No longer do you have to be the expert from day one, simply select one-of-many Expert Hunt™ sets and literally let the experts do the calling for you!</p> <p><i>NOTE: When playing EXPERT™ HUNTS, when track is finished playing, caller will automatically start playing next track in hunt set. When last track of hunt set is finished, caller will stop playing.</i></p> <p><i>When you exit a playing hunt, track will remain playing until finished but hunt sequence will stop.</i></p> <p><u>OPERATING TIP:</u> Add Expert™ Hunts Visit www.primos.com to get the latest Expert™ Hunts. This is the easiest way to call like successful Professional Hunter, without actually having time to become one!</p>
My Hunts	(create yourself)	<p>Ok, so now you're confident enough to rival the Professionals! This feature allows you to combine your own individual sound tracks into a savable and repeatable Hunt.</p> <p><i>NOTE: Use EXPERT™ HUNTS or My Hunts for a more pleasurable hunting experience. Having predetermined calling sequences to play allows the hunter to keep their eye on the field/woods/animals instead of fooling around with the remote searching for individual sound tracks to play!</i></p> <p><i>When you exit a playing hunt, track will remain playing until finished but hunt sequence will stop.</i></p>
Boss Decoy	Subdued Motion Aggressive Motion Playful Motion	<p>With power on decoy, use to select, start and stop decoy motion. Scroll to desired motion and SELECT to start/stop motion.</p> <p>SUBDUED CAT: Continuously selects between 4 random motions to trigger predators to investigate and attack decoy.</p> <p>AGGRESSIVE CAT: Aggressive twitches, turns, and pauses to catch predators attention and curiosity.</p> <p>PLAYFUL CAT: Playful turn, twitches, and pauses. Mimics a relaxed vulnerable cat.</p>

Additional Audio	FM Tuner Audio In Speakers	<p>These additional audio features allow you to listen to your favorite FM station or listen to your external device.</p> <p>FM Tuner – Scroll up/down to desired FM station.</p> <p>Audio In – Select audio method. Select ON to play sounds from external devices like an MP3 player. Exit to play sounds from remote.</p>
Settings	Backlight Wired Decoy Port Hot Keys Hunt Volume Info Sound Loop Speakers Stand Timer Theme	<p>These settings allow you to customize and personalize your caller to your own needs.</p> <p>Backlight – Set the brightness of the screen. Also, change the TIMEOUT, which is the seconds delay before the screen brightness lowers to save battery life.</p> <p>Wired Decoy Port – Select whether using a Primos Motion Decoy or other decoy. If using a Primos Motion Decoy, the screen will indicate the decoy is turned on or off.</p> <p>Hot Keys - Allow you to control the specific function of your ‘HOT’ Buttons on your remote. HOT1, 2, and D can all be programmed and used as HOT buttons. Choose from the following functions:</p> <ul style="list-style-type: none"> o When wired decoy is connected to Decoy Port, control wired decoy motion o Instantly change volume level to predetermined level o Instantly go to My Favorite Sounds list o Instantly play any [user selected] sound in sound library at user selected volume o Control Boss decoy subdued motion o Control Boss decoy aggressive motion o Control Boss decoy playful motion o Pitch Switch Mode [change pitch of sound playing] o Sound Drift Mode [sound and sound level fluctuates between three speakers] <p>Hunt Volume – Select ‘User’ to always manually control your own sound level. Selecting ‘Expert’ allows the predefined sound levels in the ‘Expert™ Hunts’ control the volume when each new sound track starts play (Note: You can still manually adjust the sound with this feature selected, it’s just the sound will start out playing at the predefined level).</p> <p>Info – Displays ‘Serial Number’ Speaker and ‘Software Version’ (needed to purchase additional sounds and Expert™ Hunts and update software)</p> <p>Sound Loop – Select ‘On’ and caller will continuously loop playing each individual track until sound is paused. Select ‘Off’ and the unit will play each sound track once and then automatically stop. <i>NOTE: When playing HUNTS, when an individual track is finished playing, caller will automatically start playing next track in hunt set until the HUNT reaches the end.</i></p> <p>Speakers – Select which speakers you want active</p> <p>Stand Timer – This feature operates like a ‘stop watch’ and counts up the amount of time. Hunters use these to keep track of how long they’ve been hunting or in-between calling sequences, etc.</p> <p>Theme – Controls the color of the remote screen. Current options are the standard ‘Primos’ green and ‘Night’ which is red for improved clarity of reduced risk of spooking animals at night!</p>

EXPERT™ COYOTE HUNTS BY RANDY ANDERSON:

These expert hunts were designed by me Randy Anderson to call in coyotes, but don't be surprised if other predators come in to the sounds like bobcats and fox. These hunts can be used any time of the day or night, time of year, in any part of the country and under most weather conditions. For instance, even though there are probably no jackrabbits in Alabama that sound still works good. The denning and territorial sets you would think would work the best during the spring and summer when the coyote pups are being born and raised, but you will find that coyotes will respond to these sets any time of the year. Coyotes mate in most parts of the country anywhere from January through March but the mating set can work any time of the year because coyotes are curious. I set these calling sets up just as if I'm sitting there with you doing the calling. The sets always start with some kind of howl or howls, because after calling now for over 42 years I find it doubles my chances to get coyotes in. These sets are set up as if no coyotes are responding, so the sets continue up to approximately 30 min. After the set ends and all of a sudden coyotes start howling you can keep calling by starting a different set or by using one of your favorite sounds. The two hot buttons are set on KIYI and rodent. Let's say for example during one of the sets you have the fawn in distress running at a loud volume and a coyote surprises you and is just standing out there at 200 yards, you can go right to the hot button that is set on the rodent and try to coax them in. Or within seconds after the first interrogation howl you have five coyotes on a dead run coming right at you at 50 yards {like we had happen on the Truth 8 DVD} you can hit the hot button set on the KIYI and try to slow or stop the charging coyotes for better shot opportunities {we killed 3 of those coyotes}. Any time during these sets you can pause the caller if you want to wait longer between sounds or forward it to later in the set or even go back to a previous sound. Let's look at the 6 calling sets I built for you.

Coyote cottontail set:

Most predator callers don't wait long enough after they howl to let the coyotes respond by howling back to you or coming in. So after the interrogation howls we will wait 2 min. You can pause for a longer wait if you like. I like to answer the initial howls with more howls because it sounds more realistic and can rev up the coyotes more. During the cottontail distress be ready with the hot buttons. I usually do pup or coyote distress at the end of sets if nothing else works, but you must remember any time you change sounds during sets you must give that coyote time to get there if he has hung up to your previous calling.

Coyote jack set [Alpha Dogg Only]:

This time after the interrogation howls I follow with female invitation howls. When hunting small areas or if you are going back to the same spots you have called before, it's good to change things up a little. After using my initial distress for a while I like to follow up with a second distress sound to help move the coyote along. On this set I go to the baby jack.

Coyote fawn set [Alpha Dogg Only]:

After the initial female invitation howls I go to the serenade howls. Remember the coyotes will often answer back to the serenade howls any time of the day but can also be coming on the run to them like you see on my DVD'S, so be ready. Callers need to use the fawn sounds more because I've even called in coyotes and does in the dead of winter. You can also howl later in the sets like we do on this one with the young answer howl. We even use a domestic pup distress this time to try and shake that ole coyote loose.

Denning set:

Coyotes give birth to pups usually between the end of March and the beginning of June. We start this set out with female invitation howls because these howls from the mother coyote will gather her pups for whatever reason, let's say to take them hunting for prey. So be ready after these howls for some higher pitched pup answer howls or the pups themselves coming in. Don't forget the adult male coyote, he may also respond. The pup in distress or pup frenzy sounds not only will call in mom and dad coyote, but will also call in pups and other coyotes not in the immediate family group.

Territorial set:

Coyote adult breeding pairs stake out an area and try to protect it from other coyotes mainly because they don't like other coyotes stealing their rabbits or prey animals that they will eventually be feeding their pups. They will warn other coyotes with challenge howls first and then come in to actually run these intruders off physically. So on this set we are imitating two coyotes challenging back and forth and then battling, thus the KIYI sounds. Don't be surprised if during any of these calling sets you here a coyote challenge for you. Then you can opt out of the set you are in and go right to this set.

Mating set:

We start this set with a female coyote howling and then answer her with male interrogation howls. In the real coyote world the males have to find the females either by just roaming around or coming to her howls. So we are trying here to drum up this scenario. When the female coyote gets physically ready to breed, she will then really start inviting the male in. If the male is there and tries to breed her too early she can make a whimpering sound. We also put in KIYI's because other males can come in to her also and battle her. The crazy thing about this is you don't just call in the males; you can also call in other females and all kinds of coyotes. On one of my DVD's you can watch 13 coyotes running all around me.

Coyote Mad Cottontail set:

This hunt you can use anytime, anywhere or time of day. It will just give you more variety in your calling stands

Territorial #2 set:

Use this hunt where you've used the other territorial hunt in the past. Just don't set up in the exact same spot. Maybe wait for a different wind direction or time of day so you can throw them ole coyotes a curve.

If you have any questions you can purchase my Mastering the Art DVD for more instruction. Thanks and Good Calling.



Randy Anderson

VISIT PRIMOS.COM TO PURCHASE ADDITIONAL SOUNDS.**UPLOADING NEW SOUNDS OR EXPERT™ HUNTS (PC & MAC COMPATIBLE)**

1. Turn power on speaker and computer. Using USB cord, connect cord to USB Connection on back of Speaker. Then connect USB cord to computer.
2. BOSS DOGG folder should automatically pop up. Simply copy and paste sounds to the sound folder of your choice.
3. Disconnect USB from computer by following USB removal instructions on your computer.
4. Remove USB cable for Speaker.
5. Leave Speaker on and turn on Remote. It may take a few minutes for Remote to download updated information from Speaker.
6. Caller is ready for use.

Note: BOSS DOGG only plays .stl sound files. Boss Dogg will play other sound file formats when converted to .stl format using the Sound Converter found free on the Primos website.

CARING FOR YOUR CALLER

Your caller contains sensitive electronic components that can be permanently damaged if exposed to excessive shock or vibration. To minimize the risk of damage to your unit, avoid dropping your unit and operating it in high-shock and high-vibration environments.

- Do not store your unit where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.
- Do not expose to prolonged exposure to moisture. This can cause this unit to malfunction.
- Never use a hard or sharp object to operate this unit or damage may result.

Cleaning the Unit:

The BOSS Dogg is constructed of high-quality materials and does not require user maintenance other than cleaning. Clean the outer casings (not the screen) using a cloth dampened with a mild detergent solution, and then wipe dry. Avoid chemical cleaners and solvents that can damage plastic components.

Cleaning Screen:

Clean the screen with a soft, clean, lint-free cloth. Use water or eyeglass cleaner, if needed. Apply the liquid to the cloth, and then gently wipe the screen.

Caution: The caller is water resistant - not waterproof.

TROUBLE SHOOTING

Check batteries in speaker, remote control and decoy if caller is not functioning properly.

Check to make sure antenna signal indicator appears on remote if caller is not functioning properly. Move remote closer to speaker until antenna signal indicator appears on remote.

If call continues to function incorrectly, call Customer Service at 601-879-9323.

FCC STATEMENT

Changes not expressly approved by Primos could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an output on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product complies with FCC OET Bulletin 65 radiation exposure limits set forth for an uncontrolled environment. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

SOFTWARE LICENSE AGREEMENT

BY USING THE PRIMOS BOSS DOGG, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT CAREFULLY. Primos grants you a limited license to use the software embedded in this device (the "Software") in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the software remain in Primos.

You acknowledge that the Software is the property of Primos and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Primos. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the software. You agree not to export or re-export the Software to any county in violation of the export control laws of the United States of America.

REGISTER YOUR BOSS DOGG CALLER

1. It is very important to register your caller. **This activates your warranty**, allows you to download latest software updates, allows you to download sounds and Expert™ Hunts, and keeps you updated with latest information on your caller.

2. To register your caller visit www.primos.com.

Note: You will need to include the serial number of the caller. It is located inside the speaker battery compartment.

ONE YEAR SERVICE GUARANTEE

1 YEAR LIMITED WARRANTY

Terms: **You MUST keep a receipt for “Proof of Purchase” for any warranty claims on your product.**

More details below.

Please contact the Primos® Customer Service Team with any comments, questions, problems or return requests. Call (601) 879-9323 or email service@primos.com.

RETURN THIS PRODUCT TO BUSHNELL OUTDOOR PRODUCTS DO NOT SEND BACK TO THE STORE

9200 Cody, Overland Park, KS 66214 • Office 601-879-9323 • Orders 1-800-523-2395 • Fax 601-879-9324 • primos.com

Limitations: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover: 1) products which have been damaged by negligence/misuse (including, but not limited to, improper storage, battery leakage and water damage caused by submersion), accident or which have been modified or repaired by unauthorized persons; 2) cracked or broken housing of units damaged by excess heat or impact/force; 3) damage caused by wild animals 4) the cost of shipping this product to the factory for service and its return to you. This warranty is valid only in the United States of America. Any applicable implied warranties are also limited to 180 days, and Primos® will NOT be liable for consequential damages.

In the event warranty service is needed, please contact Primos® Customer Service.

1. Remove batteries from product and pack in well-padded or highly protective box. Primos® will NOT be responsible for damage incurred in returning product for repair / replacement.
2. Include Proof of Purchase. ANY ITEM RETURNED WITHOUT PROOF OF PURCHASE WILL NOT BE ACCEPTED.
3. Send product prepaid to: Bushnell Outdoor Products, ATTN: Lab Repair, 9200 Cody, Overland Park, KS 66214.

For warranty or service information, email service@primos.com or call Customer Service at (601) 879-9323.

DISCLAIMERS

Primos® makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, or for damages resulting from the use of the information contained therein. Primos® reserves the right to alter the features and contents of this publication, hardware or software without obligation or advance notice.

Warranty does not extend to any accessories used with this product.

Primos® is not responsible if you use this product for illegal purposes.

Primos® shall not be obligated to perform preventative maintenance, installation, deinstallation, or maintenance.

The illustrations in this manual are for instructional purposes only and may not represent actual product exactly.

